

Intrim 800 Series Shadowline System Instruction Manual

Figure 1

Cut DJ800 door jamb material to required lengths with a 45-degree mitre cut to the top of stiles and each end of the head.

Assemble the head and stile mitre joints with PVA glue and nails or screws. (Detail A)

Figure 2

Pack opening and install DJ800 door jamb plumb and level. Take care when installing jamb material, to make sure it is fixed parallel with timber framework. (example – if framework is 90mm wide and plasterboard is 10mm thick = 90mm frame + (2 x 10mm) 2 thicknesses of plasterboard + (2 x 3.5mm) 2 thicknesses of plaster set = 117mm total width of DJ800 door jamb, therefore the difference between timber framework face and door jamb face = (117 – 90) divided by 2 = 13.5mm on both sides between the jamb face and framework face. (Detail B)

Once all DJ800 door jambs are installed, it is time to install the SK800 skirting.

Cut SK800 skirting to required lengths to fit neatly between door jambs and internal and external corners of framework. Cut SK800 skirting with 45-degree mitre cuts for internal and external corners.

SK800 Skirting must be nail or screw fixed into every stud at a maximum distance of 600mm centres. The top ribbed section of skirting must be fixed to every stud. (Detail B)

Figure 3

Install plasterboard sheet to framework as per manufacturer's specifications. Cut and fit plasterboard sheet as close as possible to door jamb and skirting edges. Preferable to have the factory finish plasterboard edge sitting on the top of SK800 skirting edge.

Intrim 800 Series Shadowline System Instruction Manual

Figure 4

Install all PVC stop beads (PLTB 630 – 30mm x 6mm tear off bead) to door jamb surrounds and metal perforated angles to external wall corners, taking care to cut the corners to a point to eliminate plaster set material build-up. (Detail C)

Figure 5

Set all plaster joints including the joint where the bottom edge of wall plasterboard sits on top of the shadowline skirting, using paper joint tape. All plaster set and accessories must be installed to manufacturer's specifications and instructions.

Figure 6

Apply plaster set to PVC stop beads around door jamb surrounds. All plaster set and accessories must be installed to manufacturer's specifications and instructions.

Figure 7

Apply all coats of plaster set including top coats to all plaster joints and sand. Tear of PVC lip on stop bead around door jamb surrounds and it is now ready for painting. All plaster set and accessories must be installed to manufacturer's specifications and instructions.

**INSTRUCTION MANUAL
FOR SK800 AND DJ800**

This drawing must be read in conjunction with SK800 video on www.intrimmouldings.com.au and plasterboard manufacturer's instructions

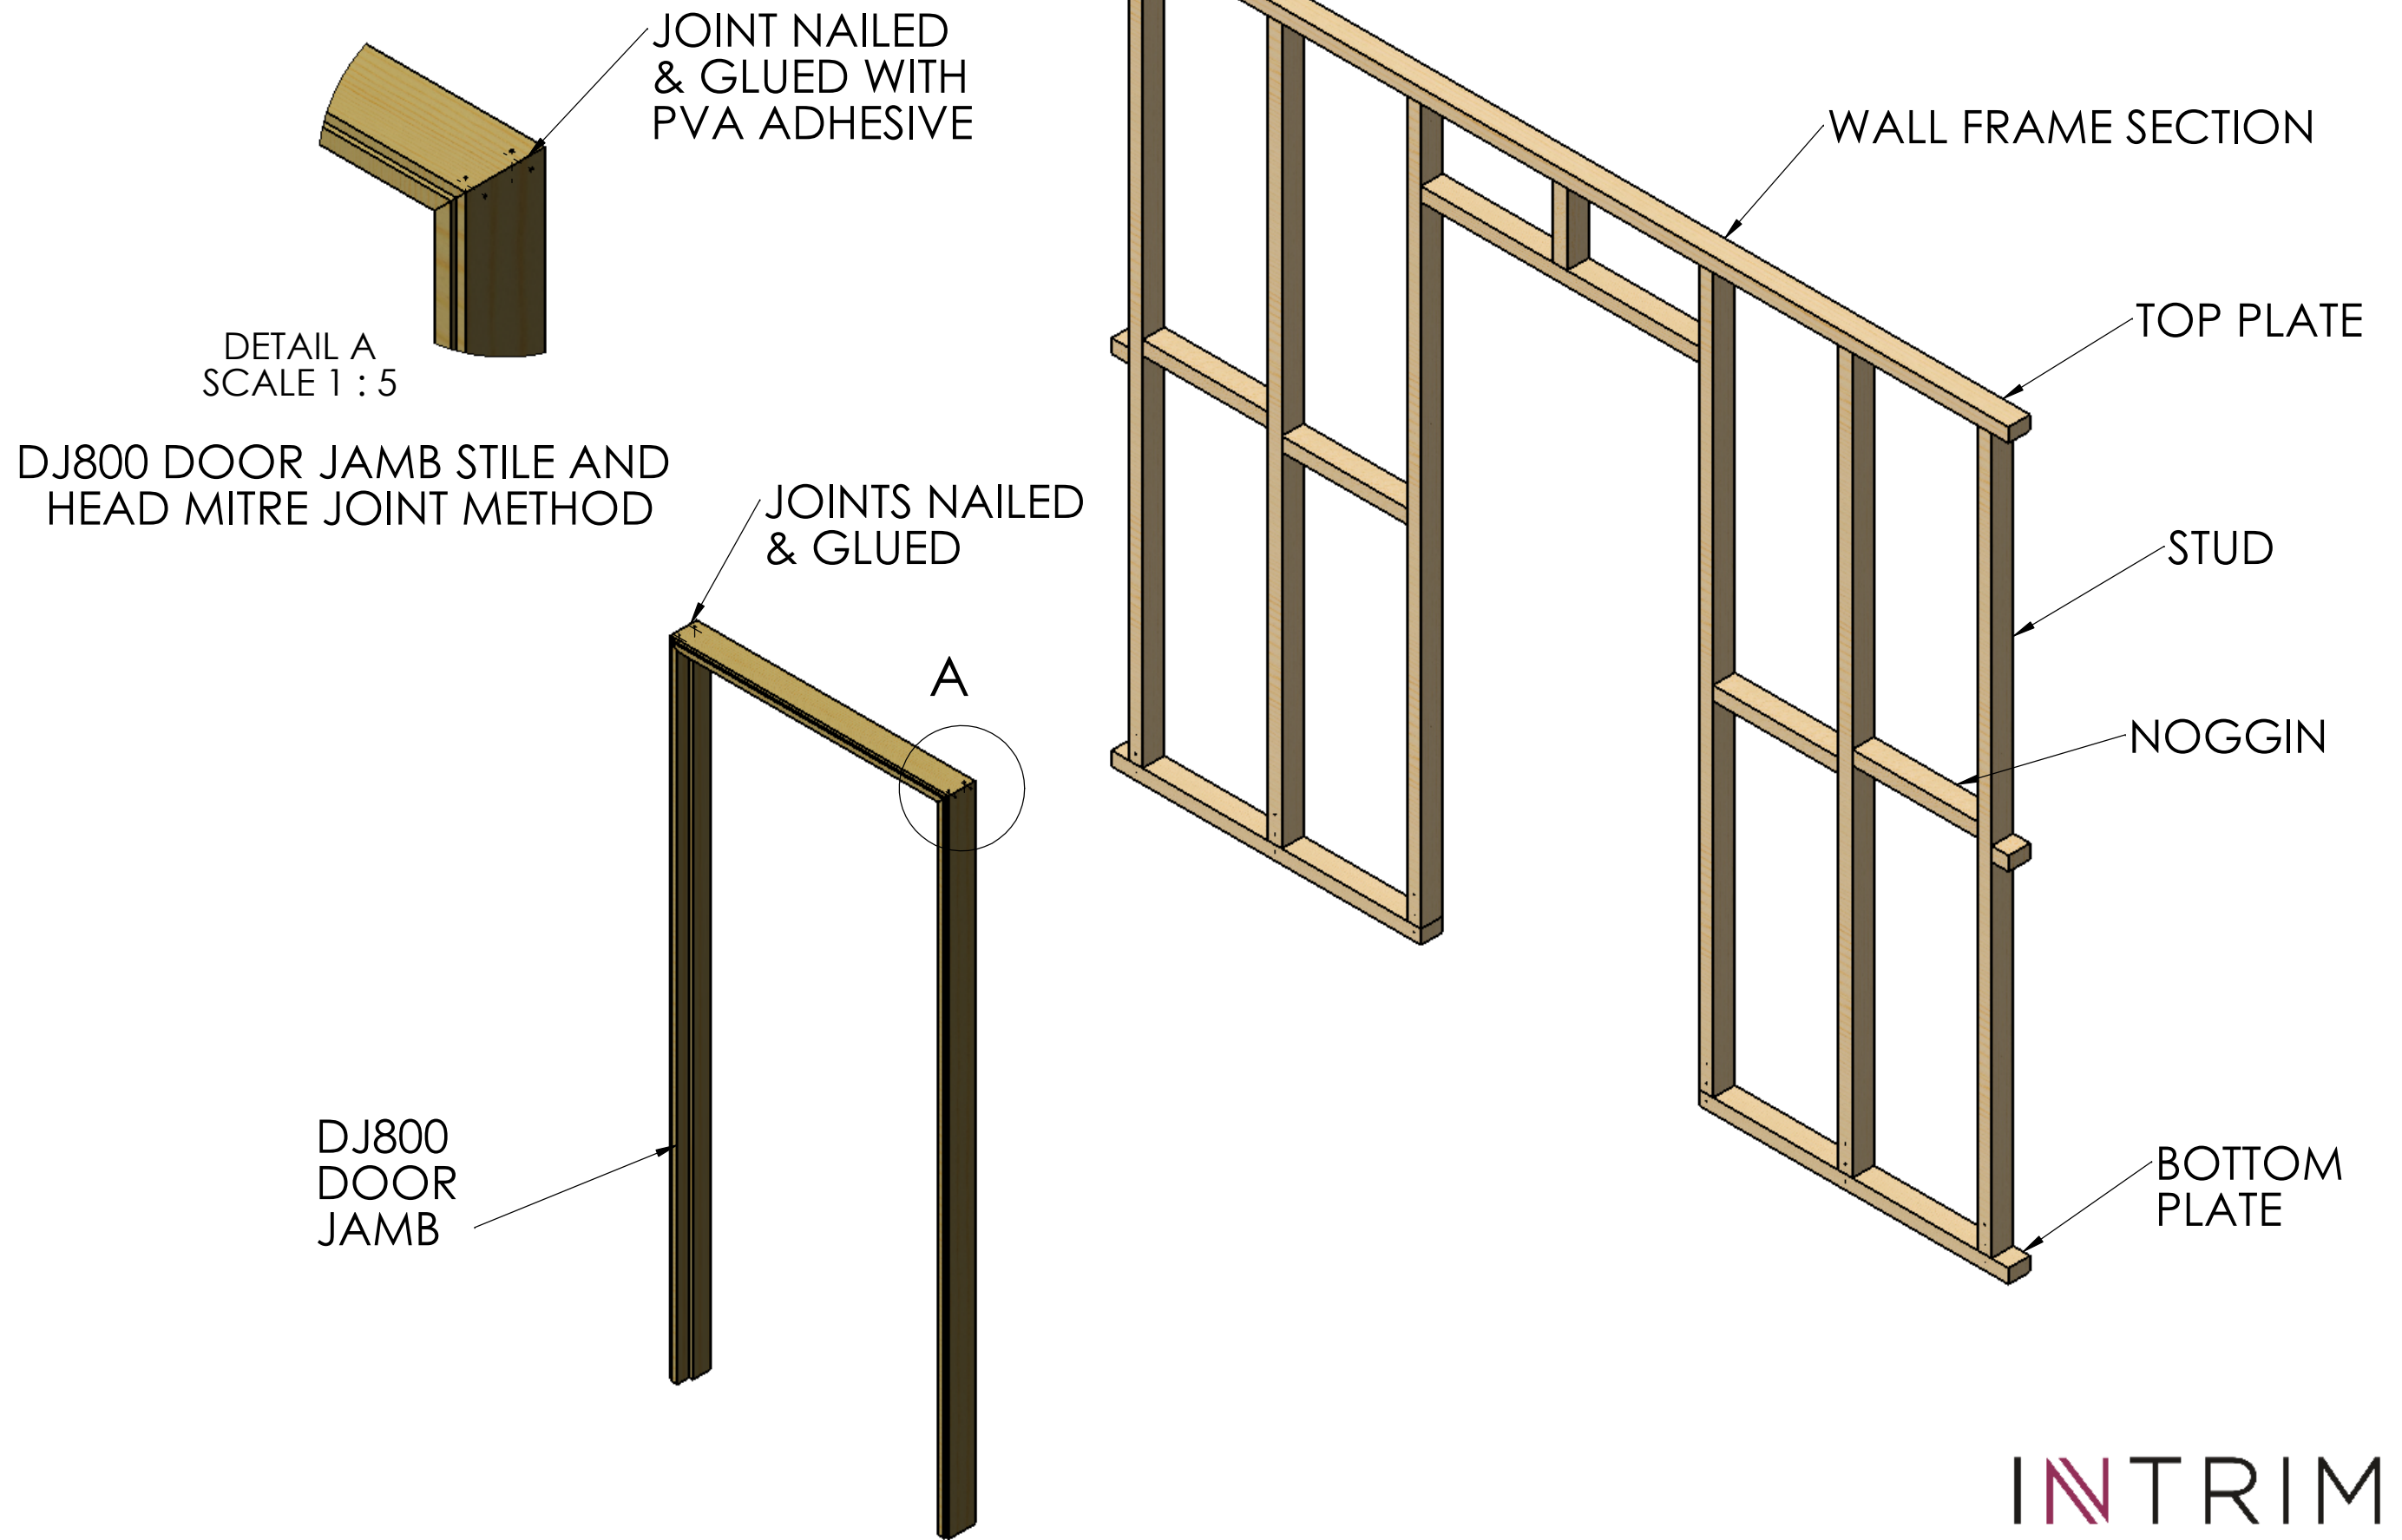


FIGURE 1 - 800 SERIES DOOR JAMB ASSEMBLY DETAILS

INTRIM

COPYRIGHT © 2016

**INSTRUCTION MANUAL
FOR SK800 AND DJ800**

This drawing must be read in conjunction with SK800 video on www.intrimmouldings.com.au and plasterboard manufacturer's instructions

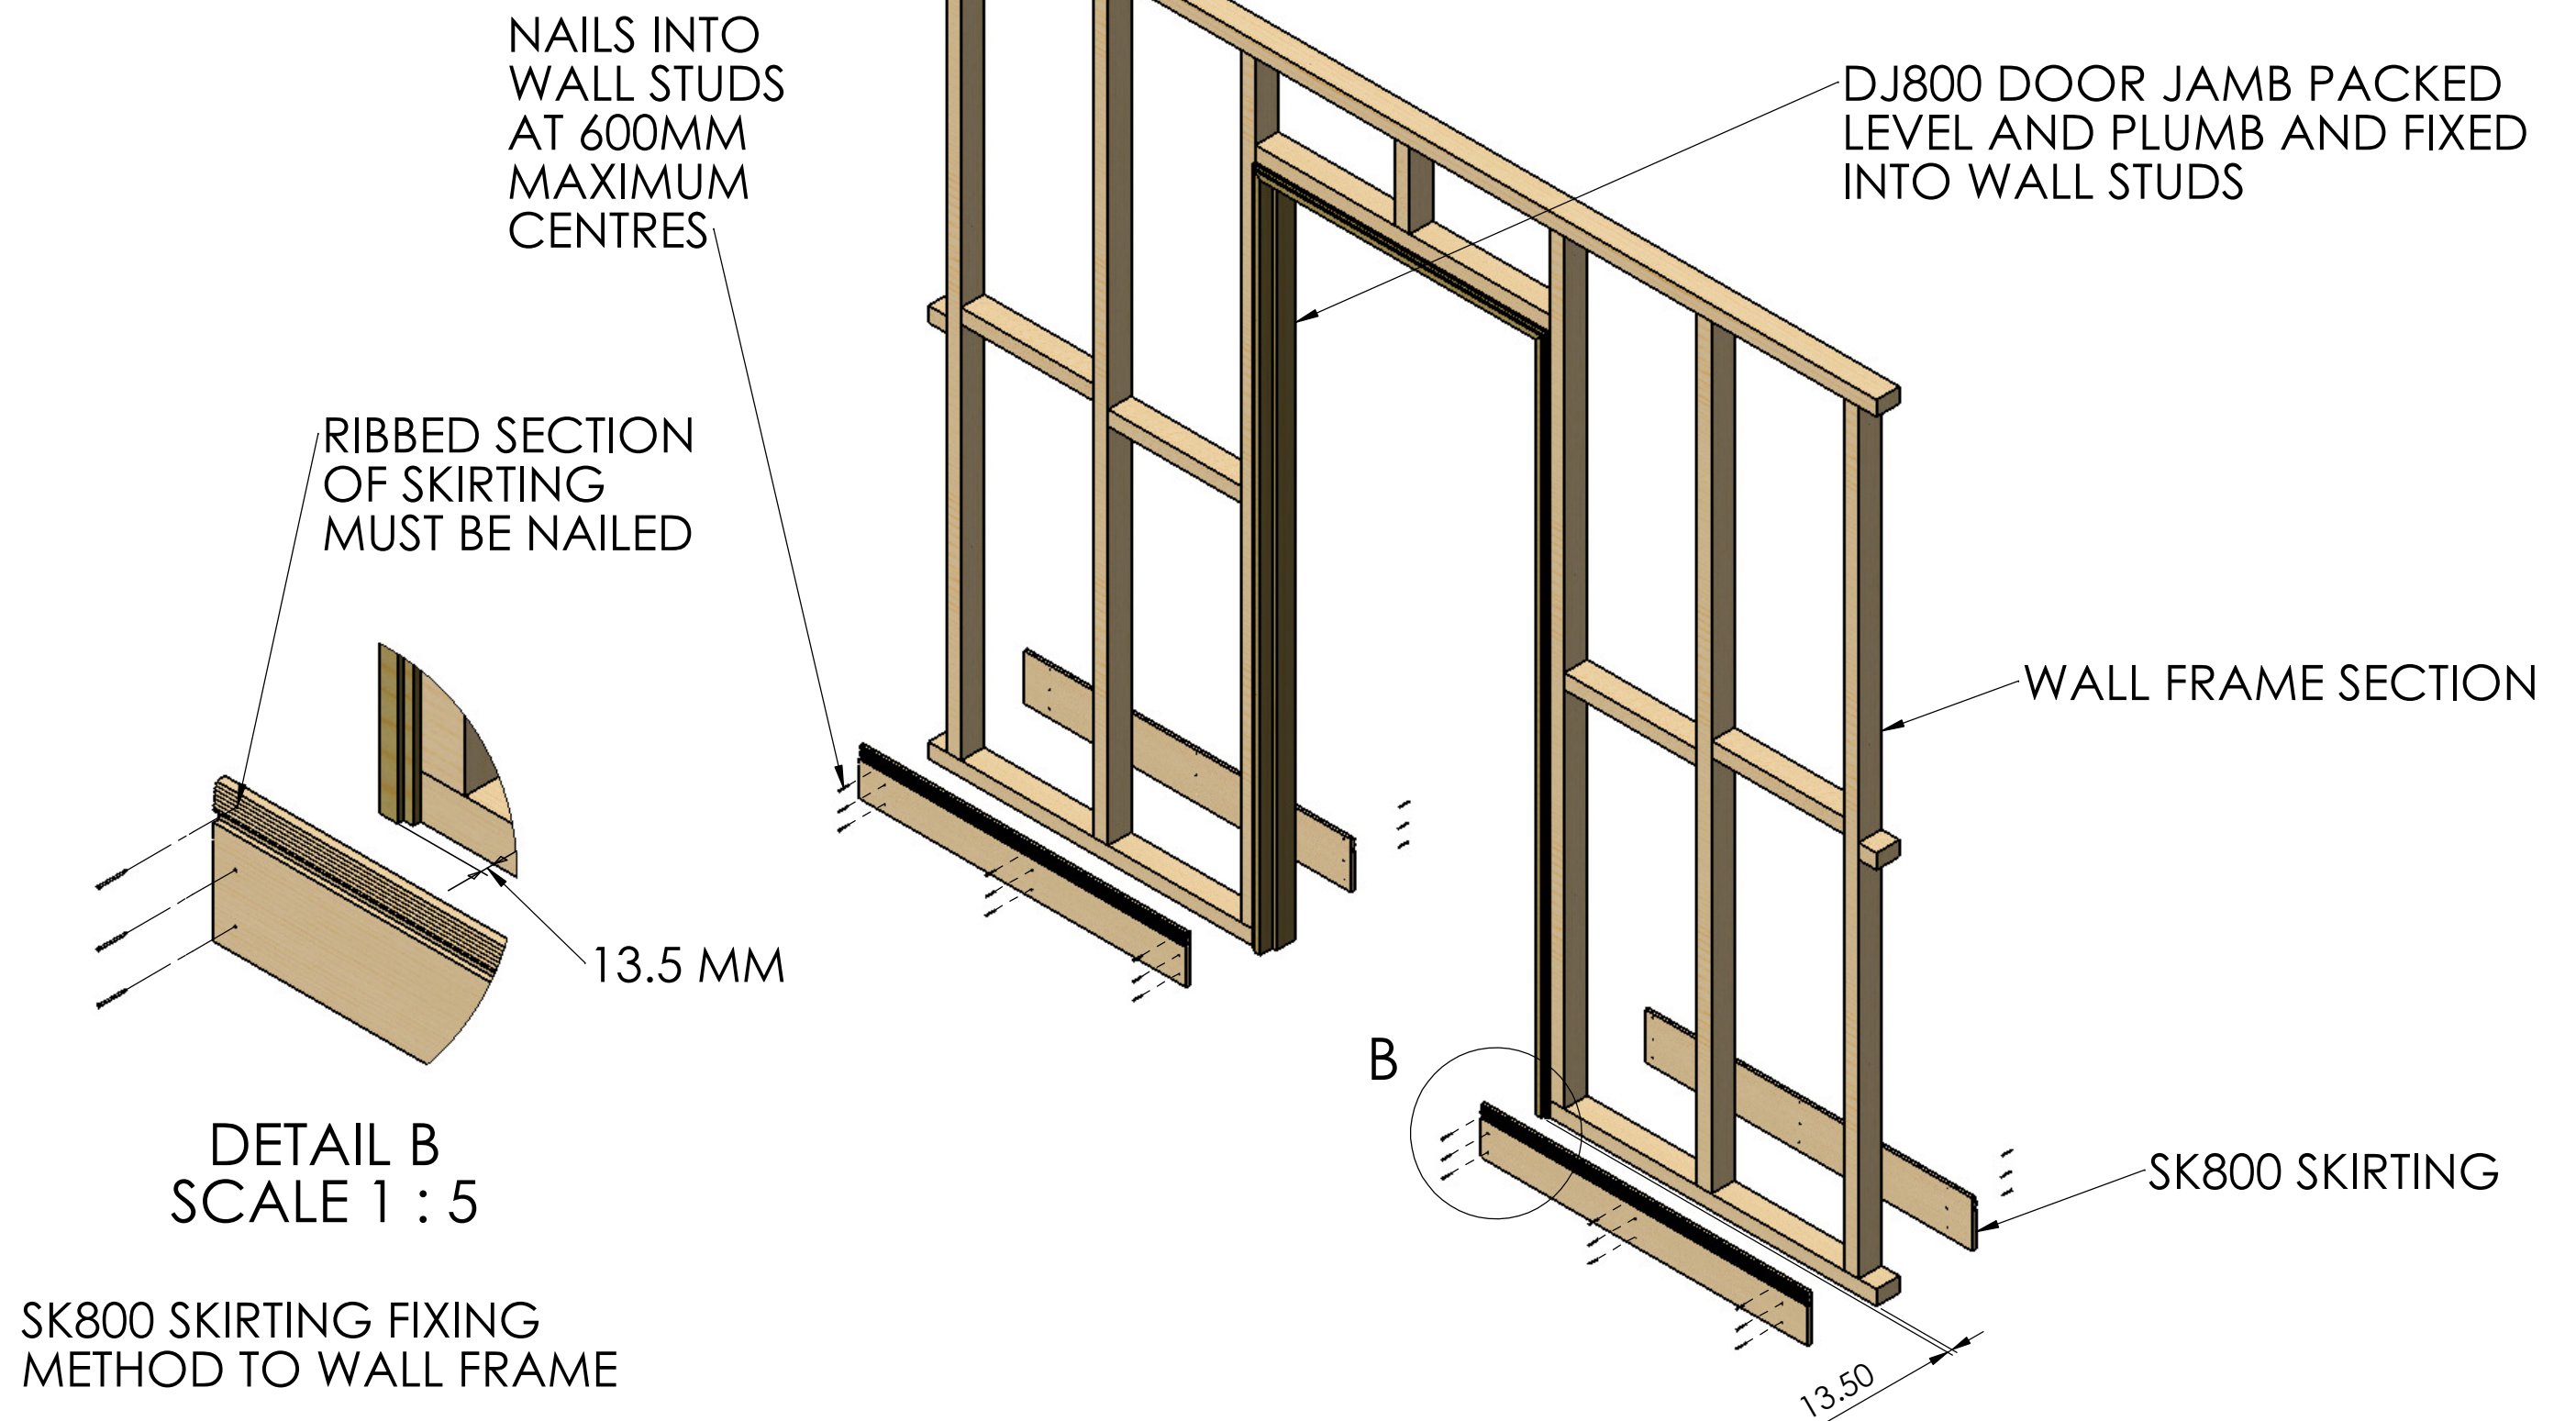


FIGURE 2 - 800 SERIES SKIRTING FIXING DETAILS

INTRIM

COPYRIGHT © 2016

INSTRUCTION MANUAL FOR SK800 AND DJ800

This drawing must be read in conjunction with SK800 video on www.intrimmouldings.com.au and plasterboard manufacturer's instructions

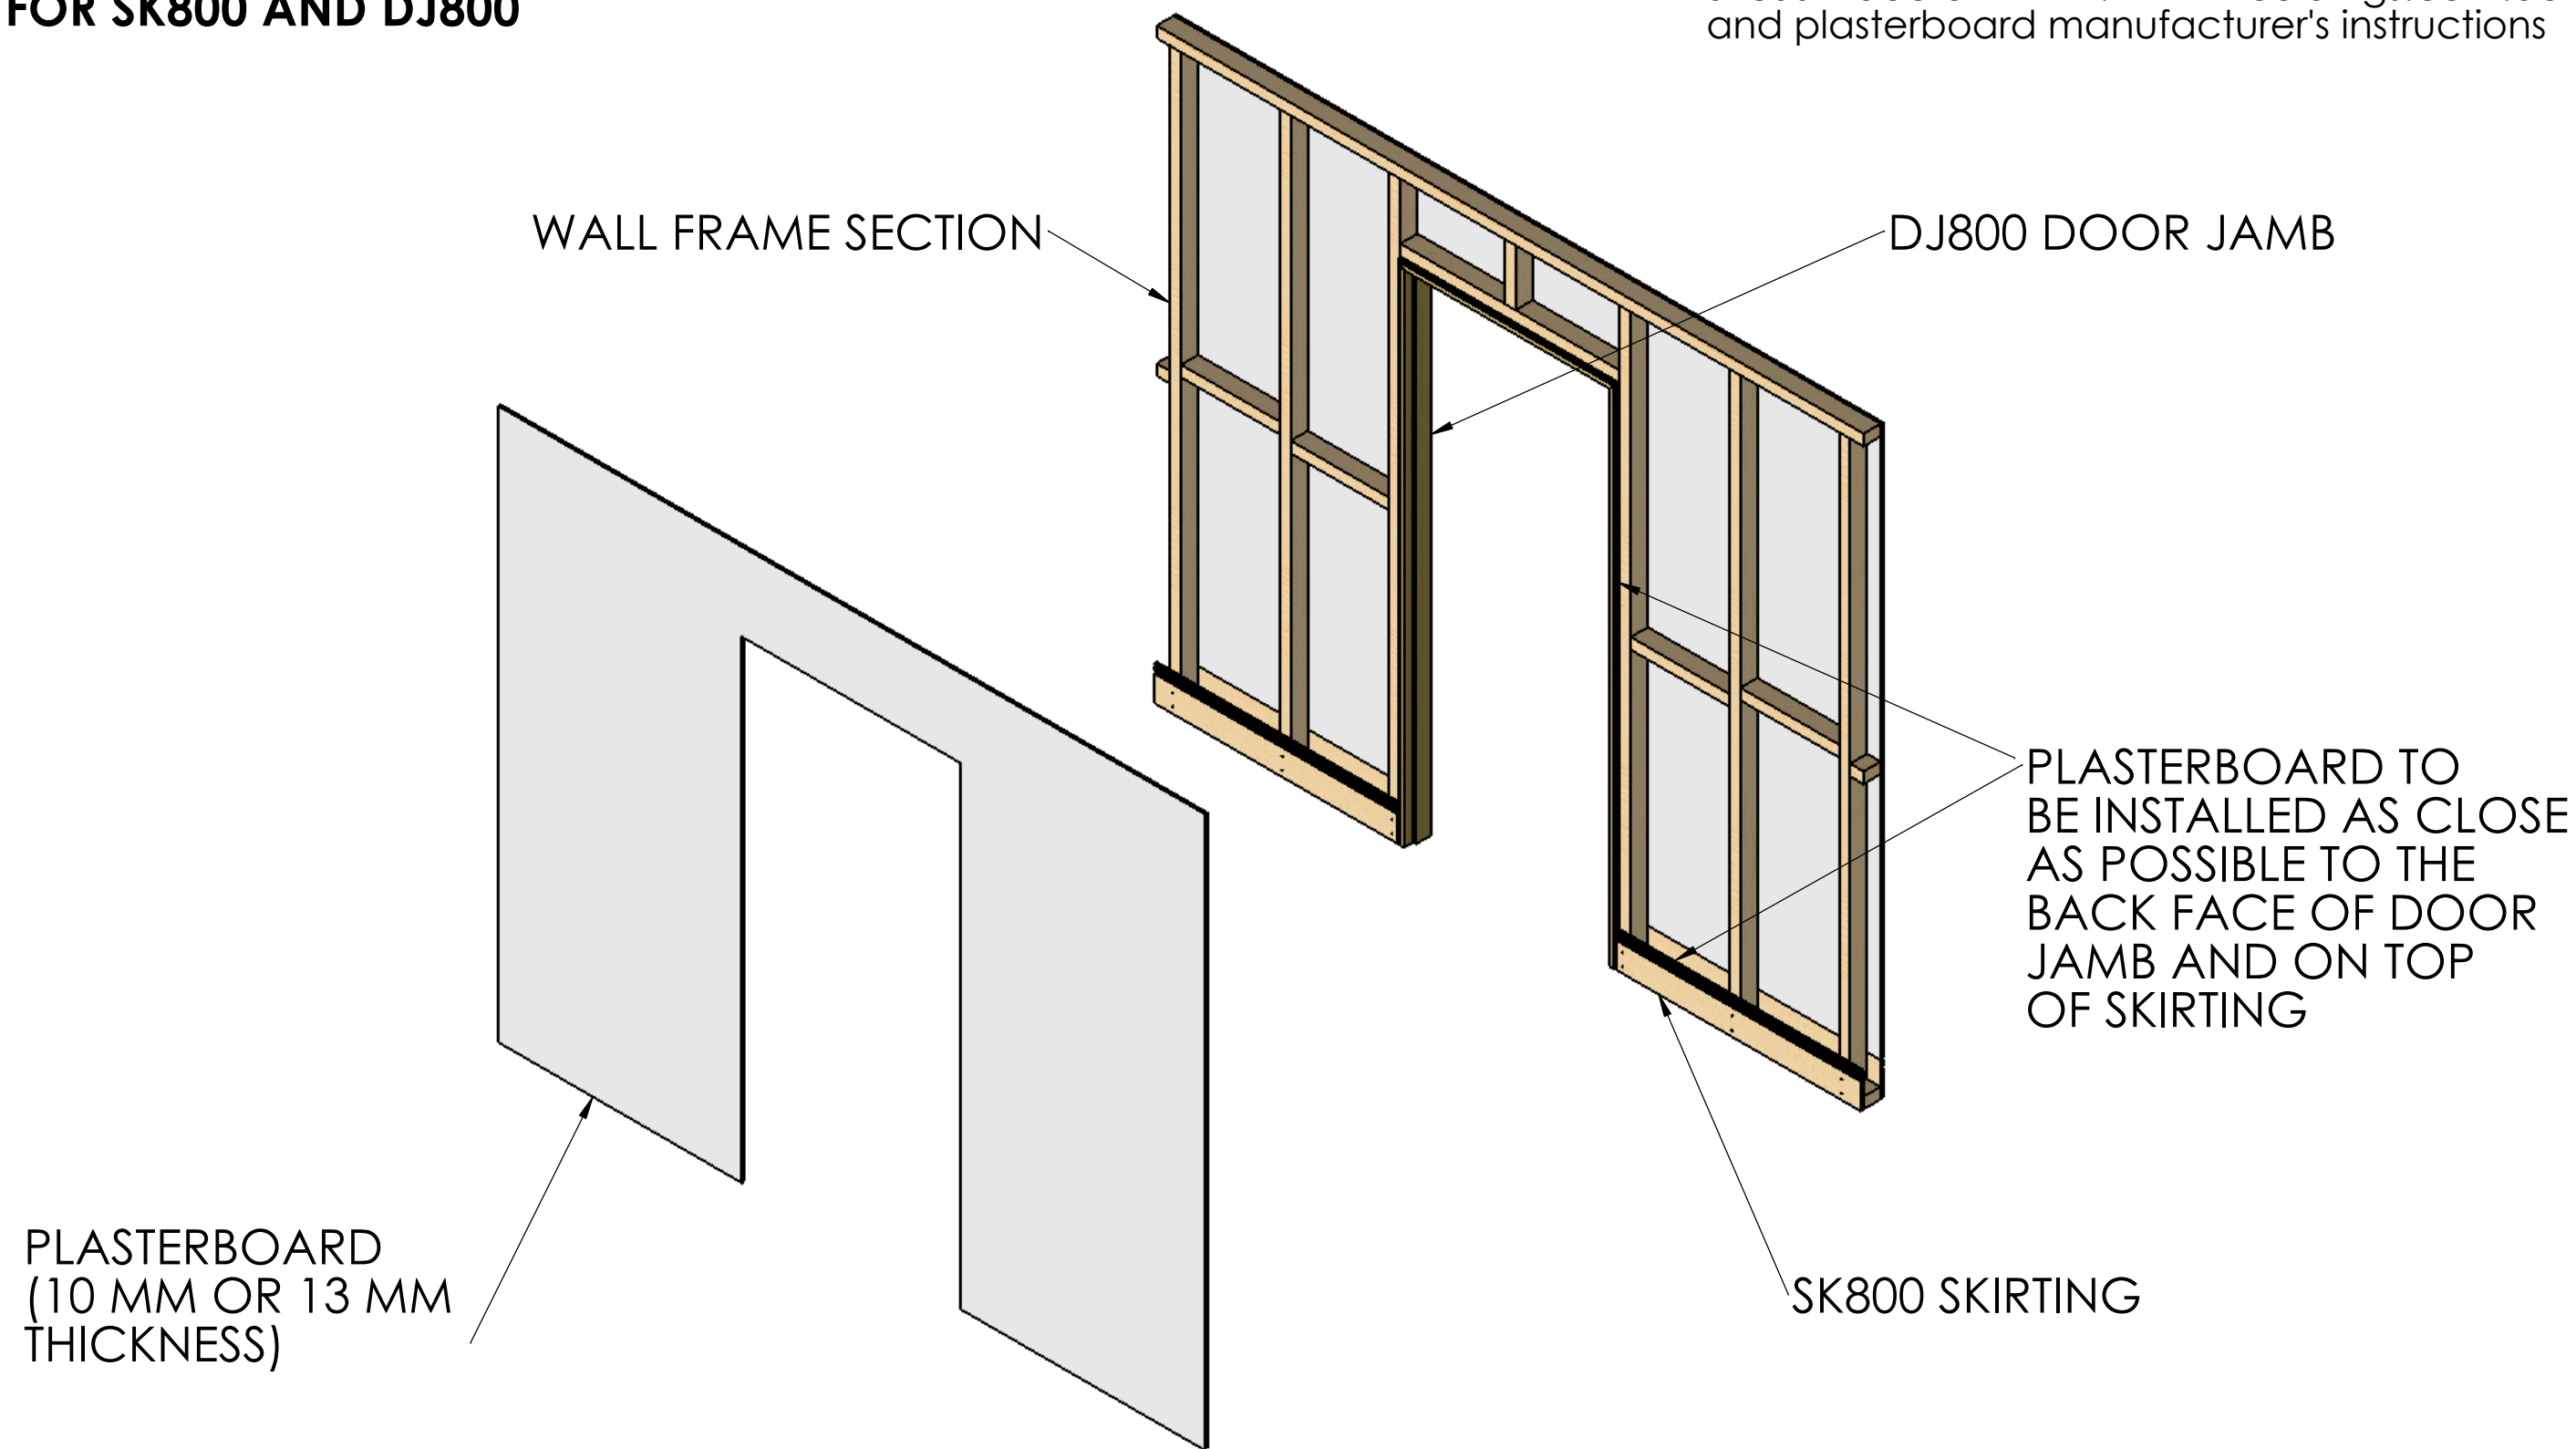


FIGURE 3 - 800 SERIES PLASTERBOARD INSTALLATION

PLASTERBOARD TO BE FIXED TO WALL FRAMES
AS PER MANUFACTURER'S INSTRUCTIONS

INTRIM

COPYRIGHT © 2016

**INSTRUCTION MANUAL
FOR SK800 AND DJ800**

This drawing must be read in conjunction with SK800 video on www.intrimmouldings.com.au and plasterboard manufacturer's instructions

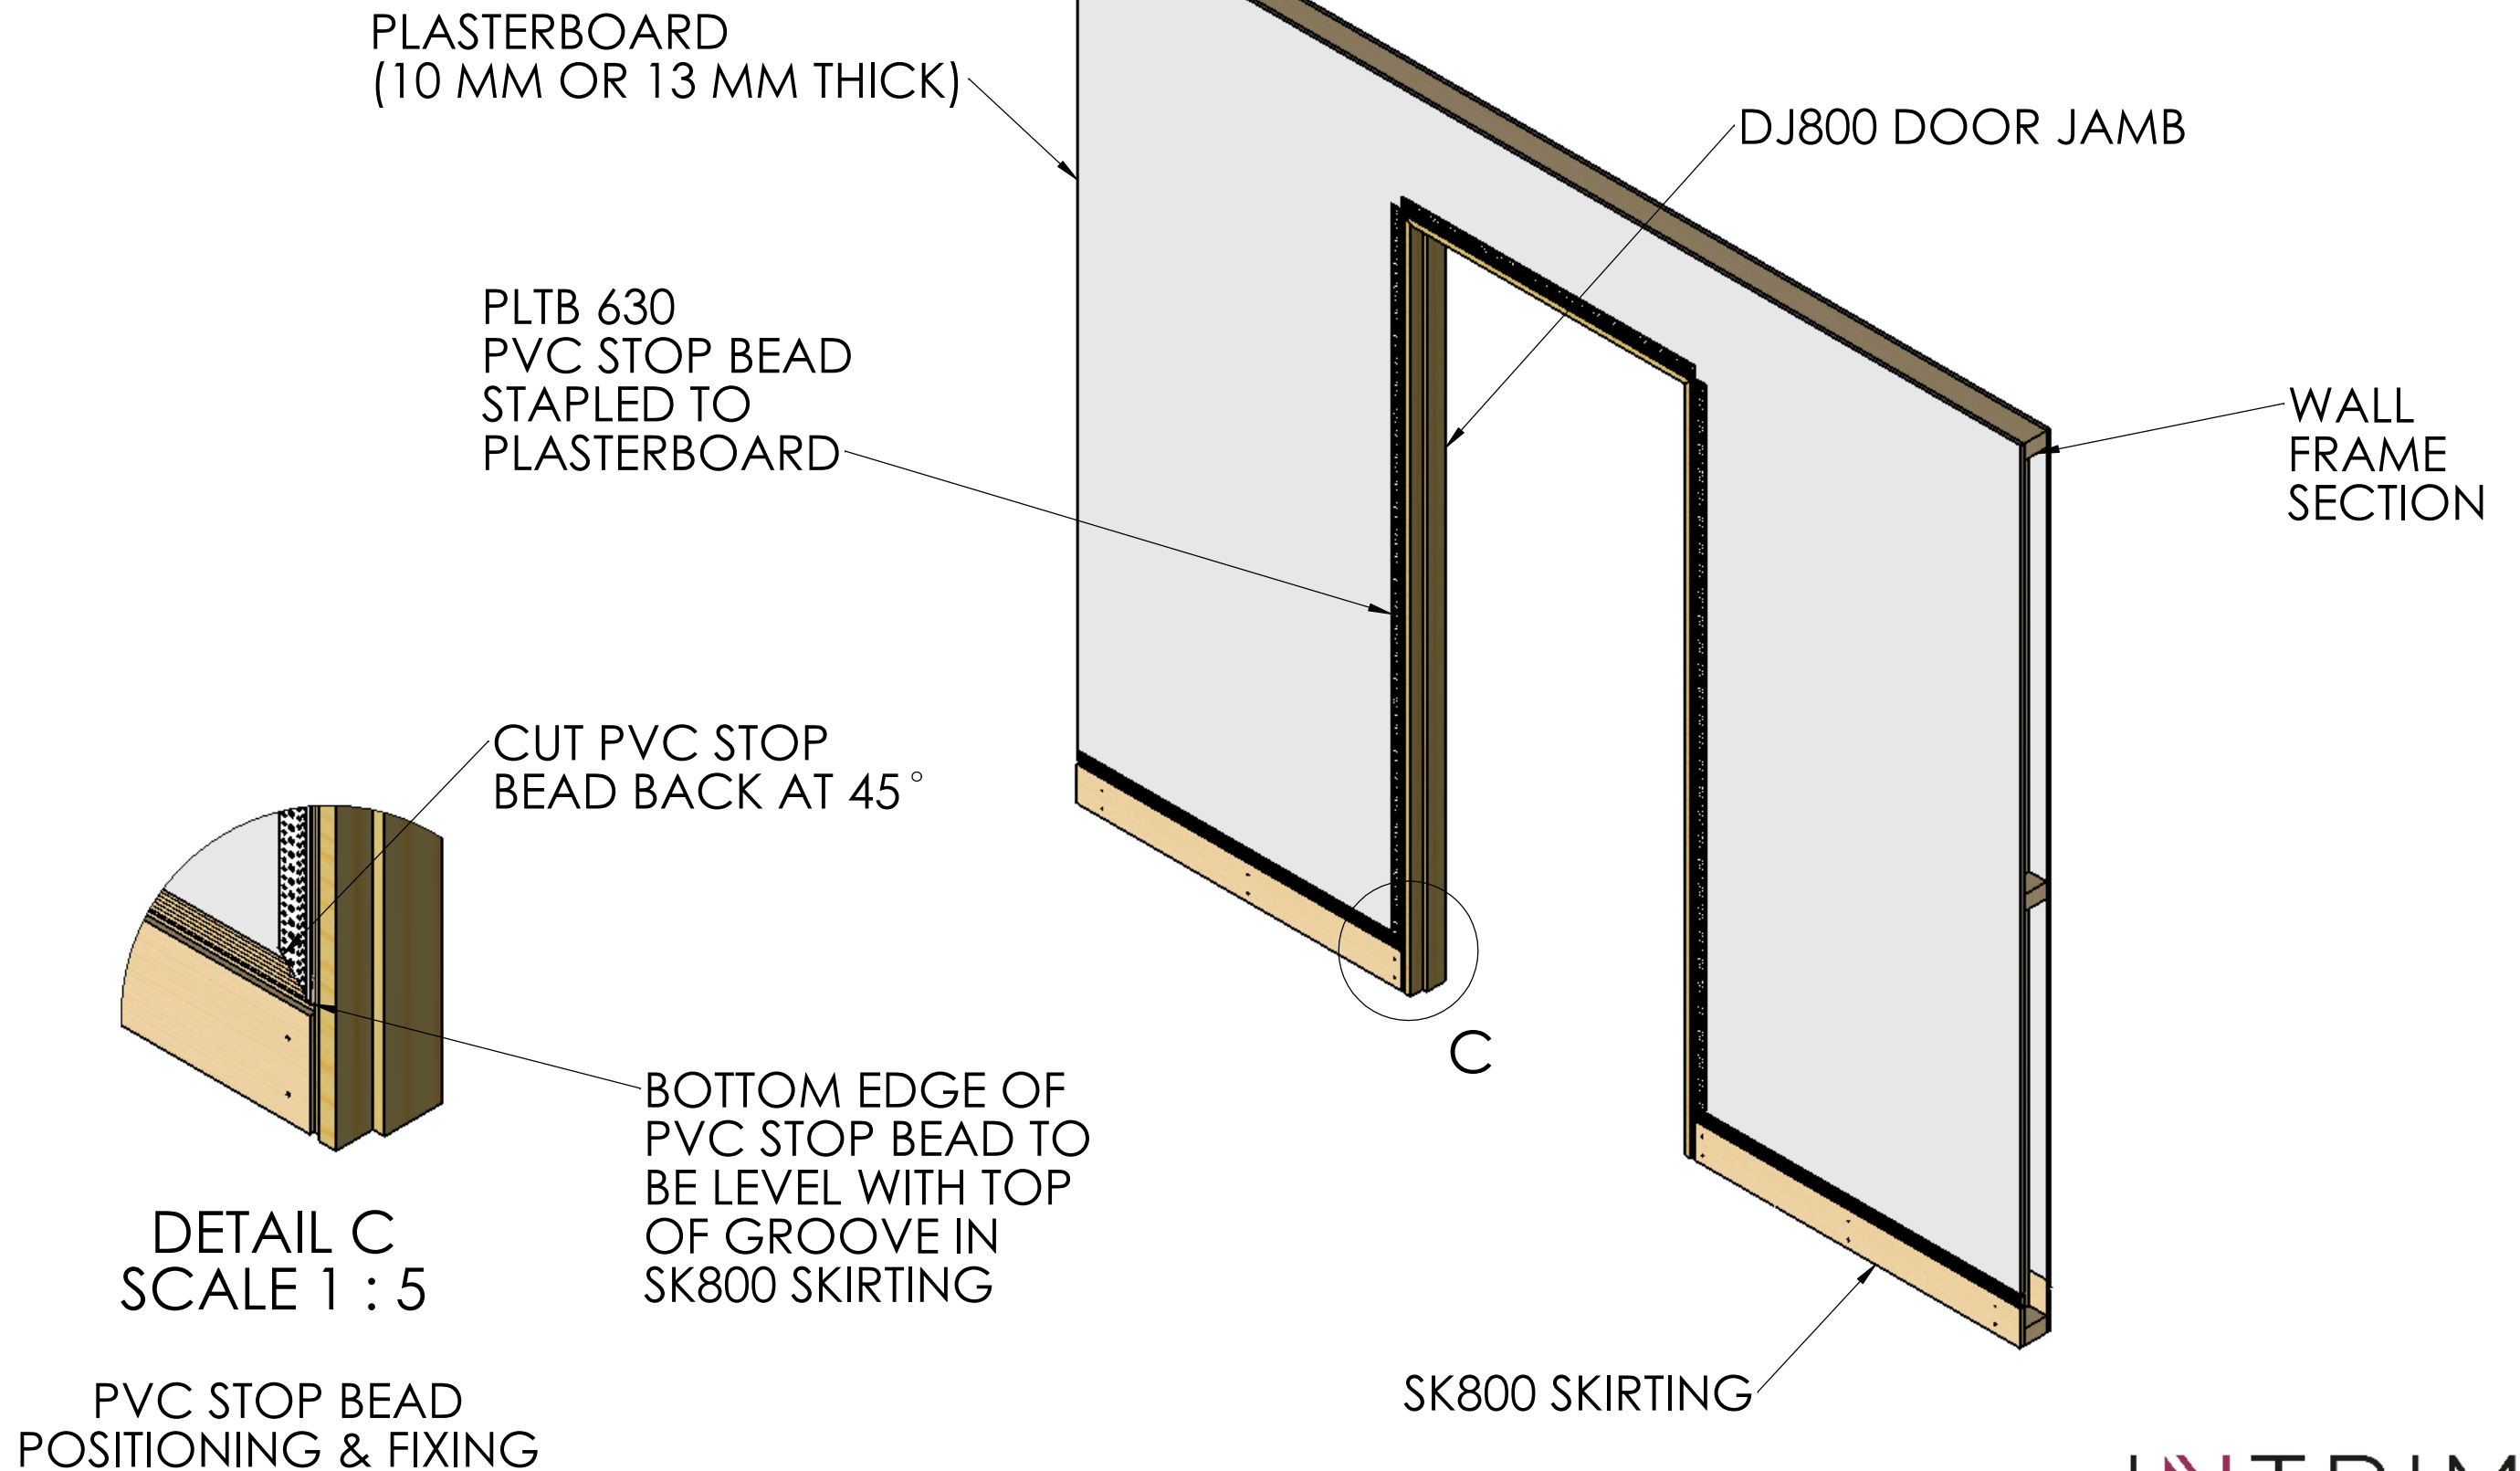


FIGURE 4 - 800 SERIES PVC STOP BEAD INSTALLATION

**INSTRUCTION MANUAL
FOR SK800 AND DJ800**

This drawing must be read in conjunction with SK800 video on www.intrimmouldings.com.au and plasterboard manufacturer's instructions

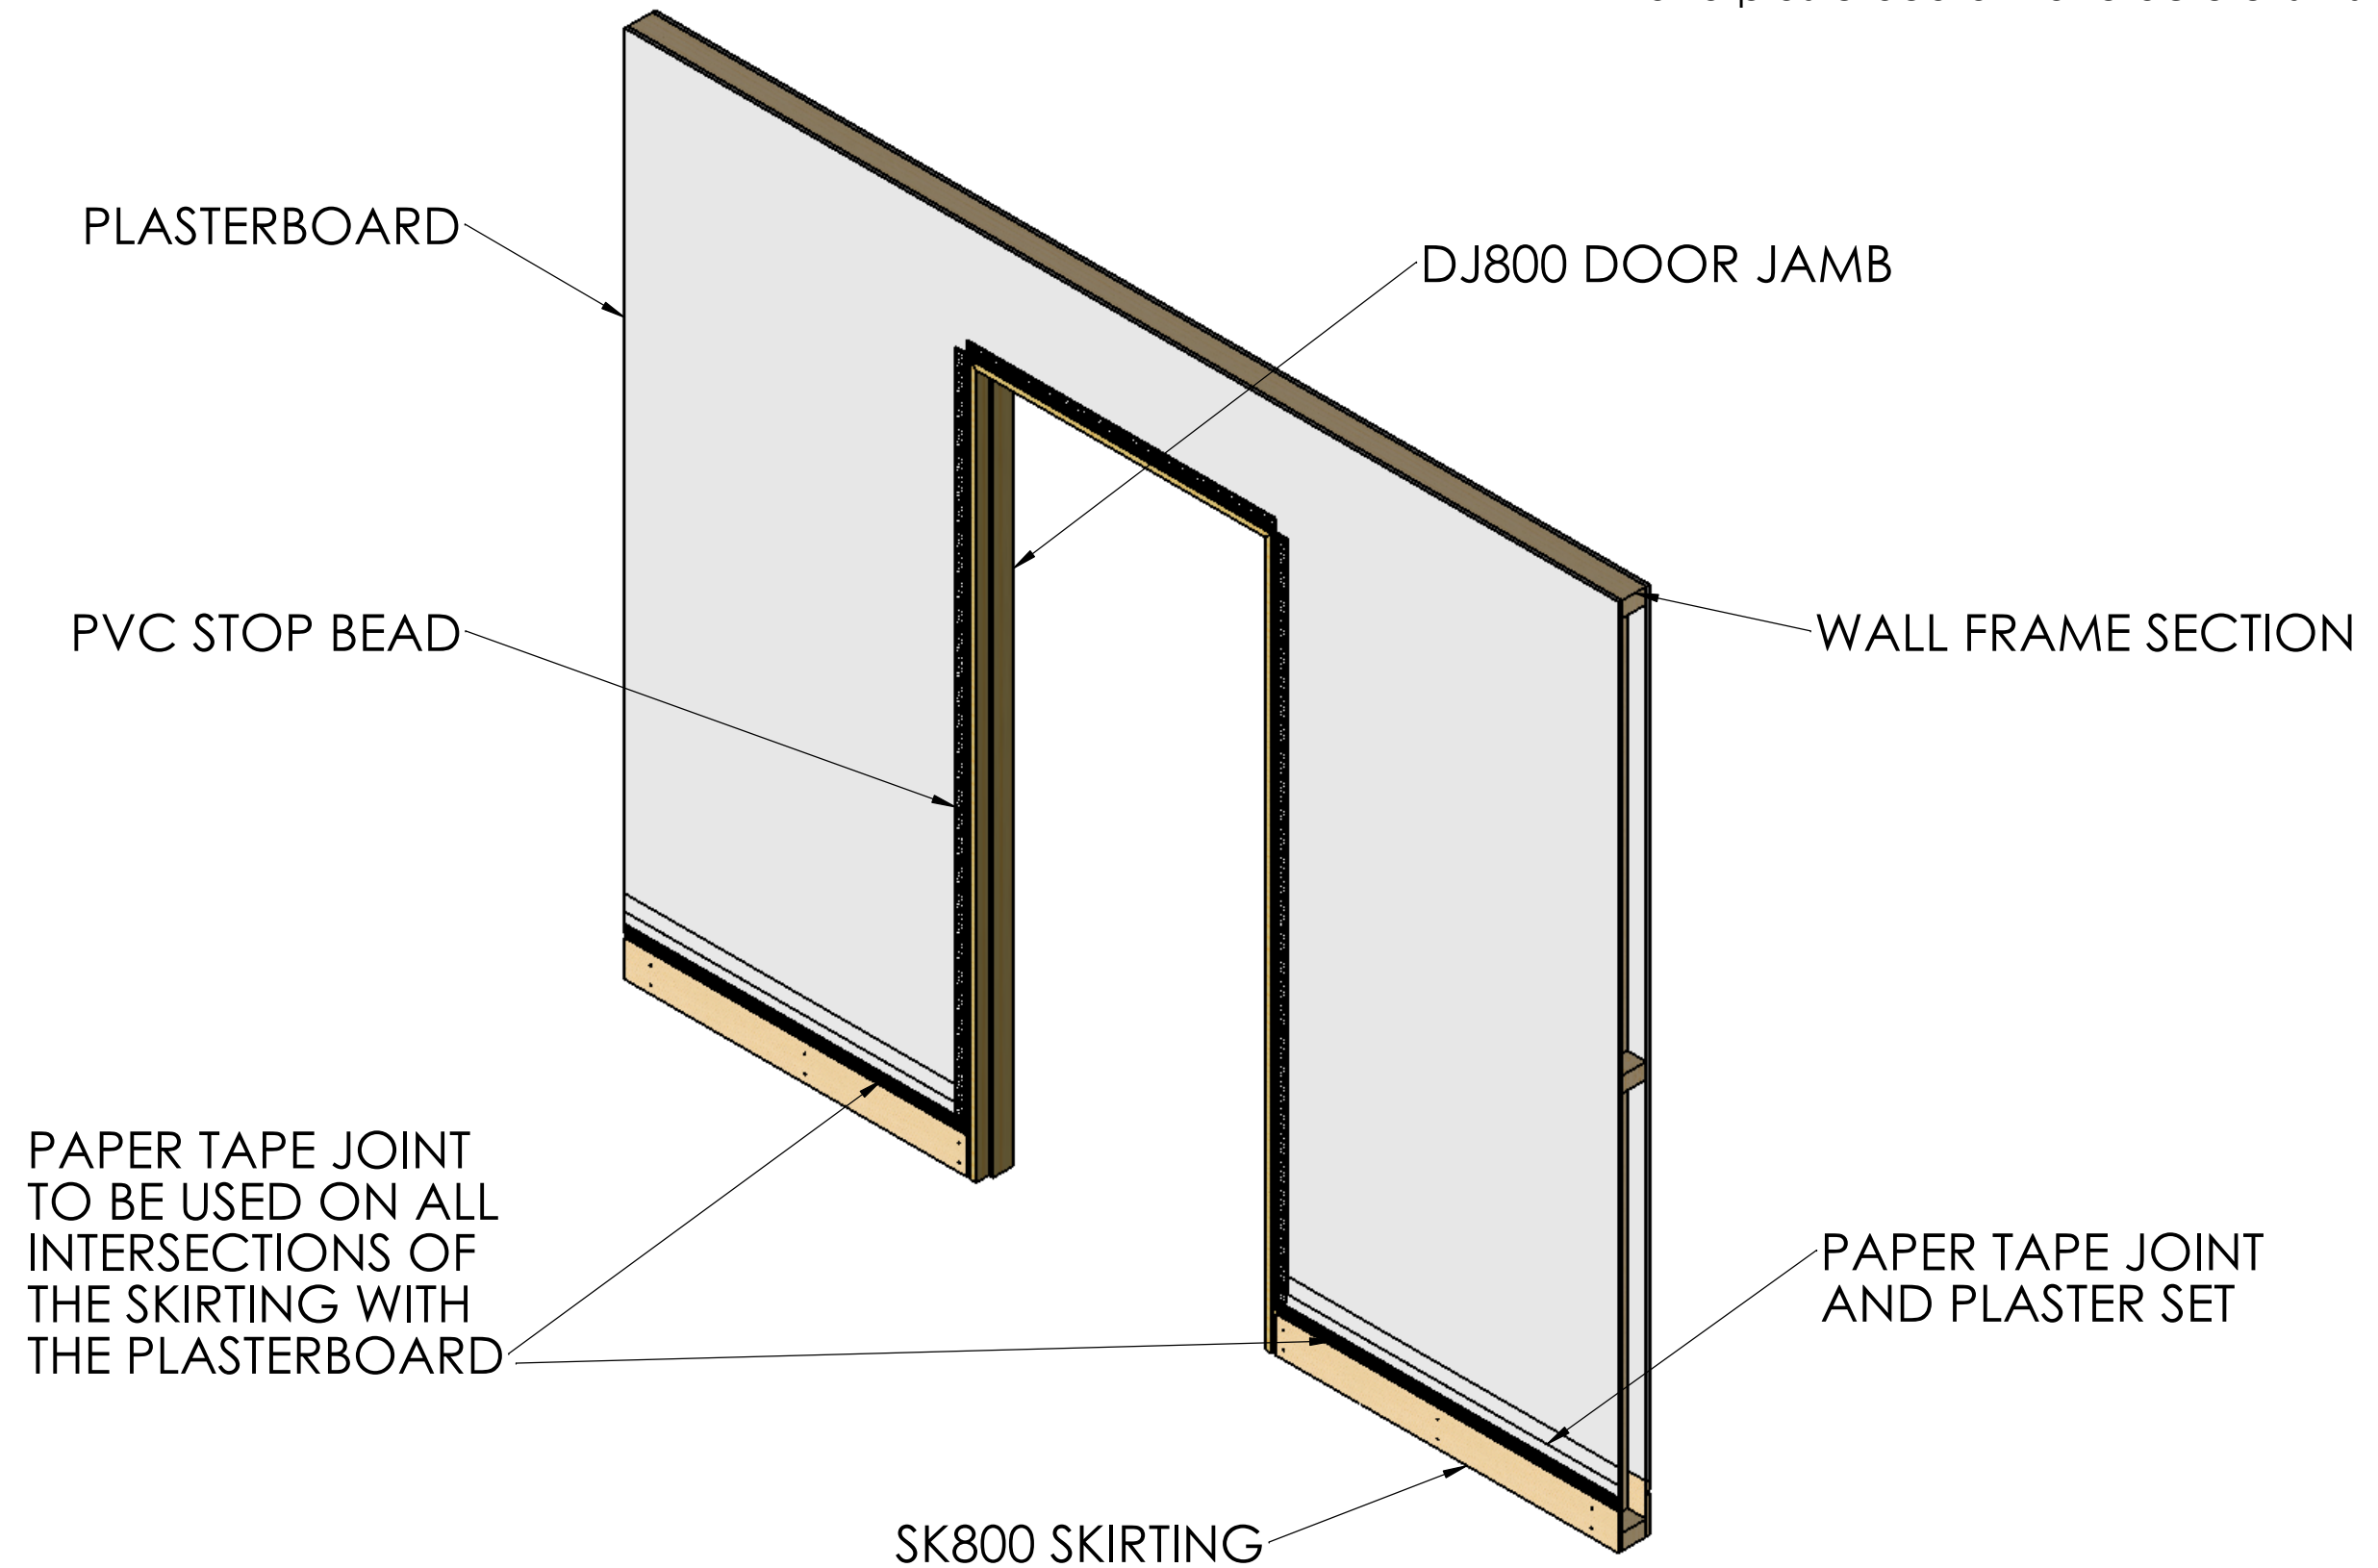


FIGURE 5 - 800 SERIES PLASTER SETTING OF SKIRTING AND PLASTERBOARD INTERSECTION

**INSTRUCTION MANUAL
FOR SK800 AND DJ800**

This drawing must be read in conjunction with SK800 video on www.intrimmouldings.com.au and plasterboard manufacturer's instructions

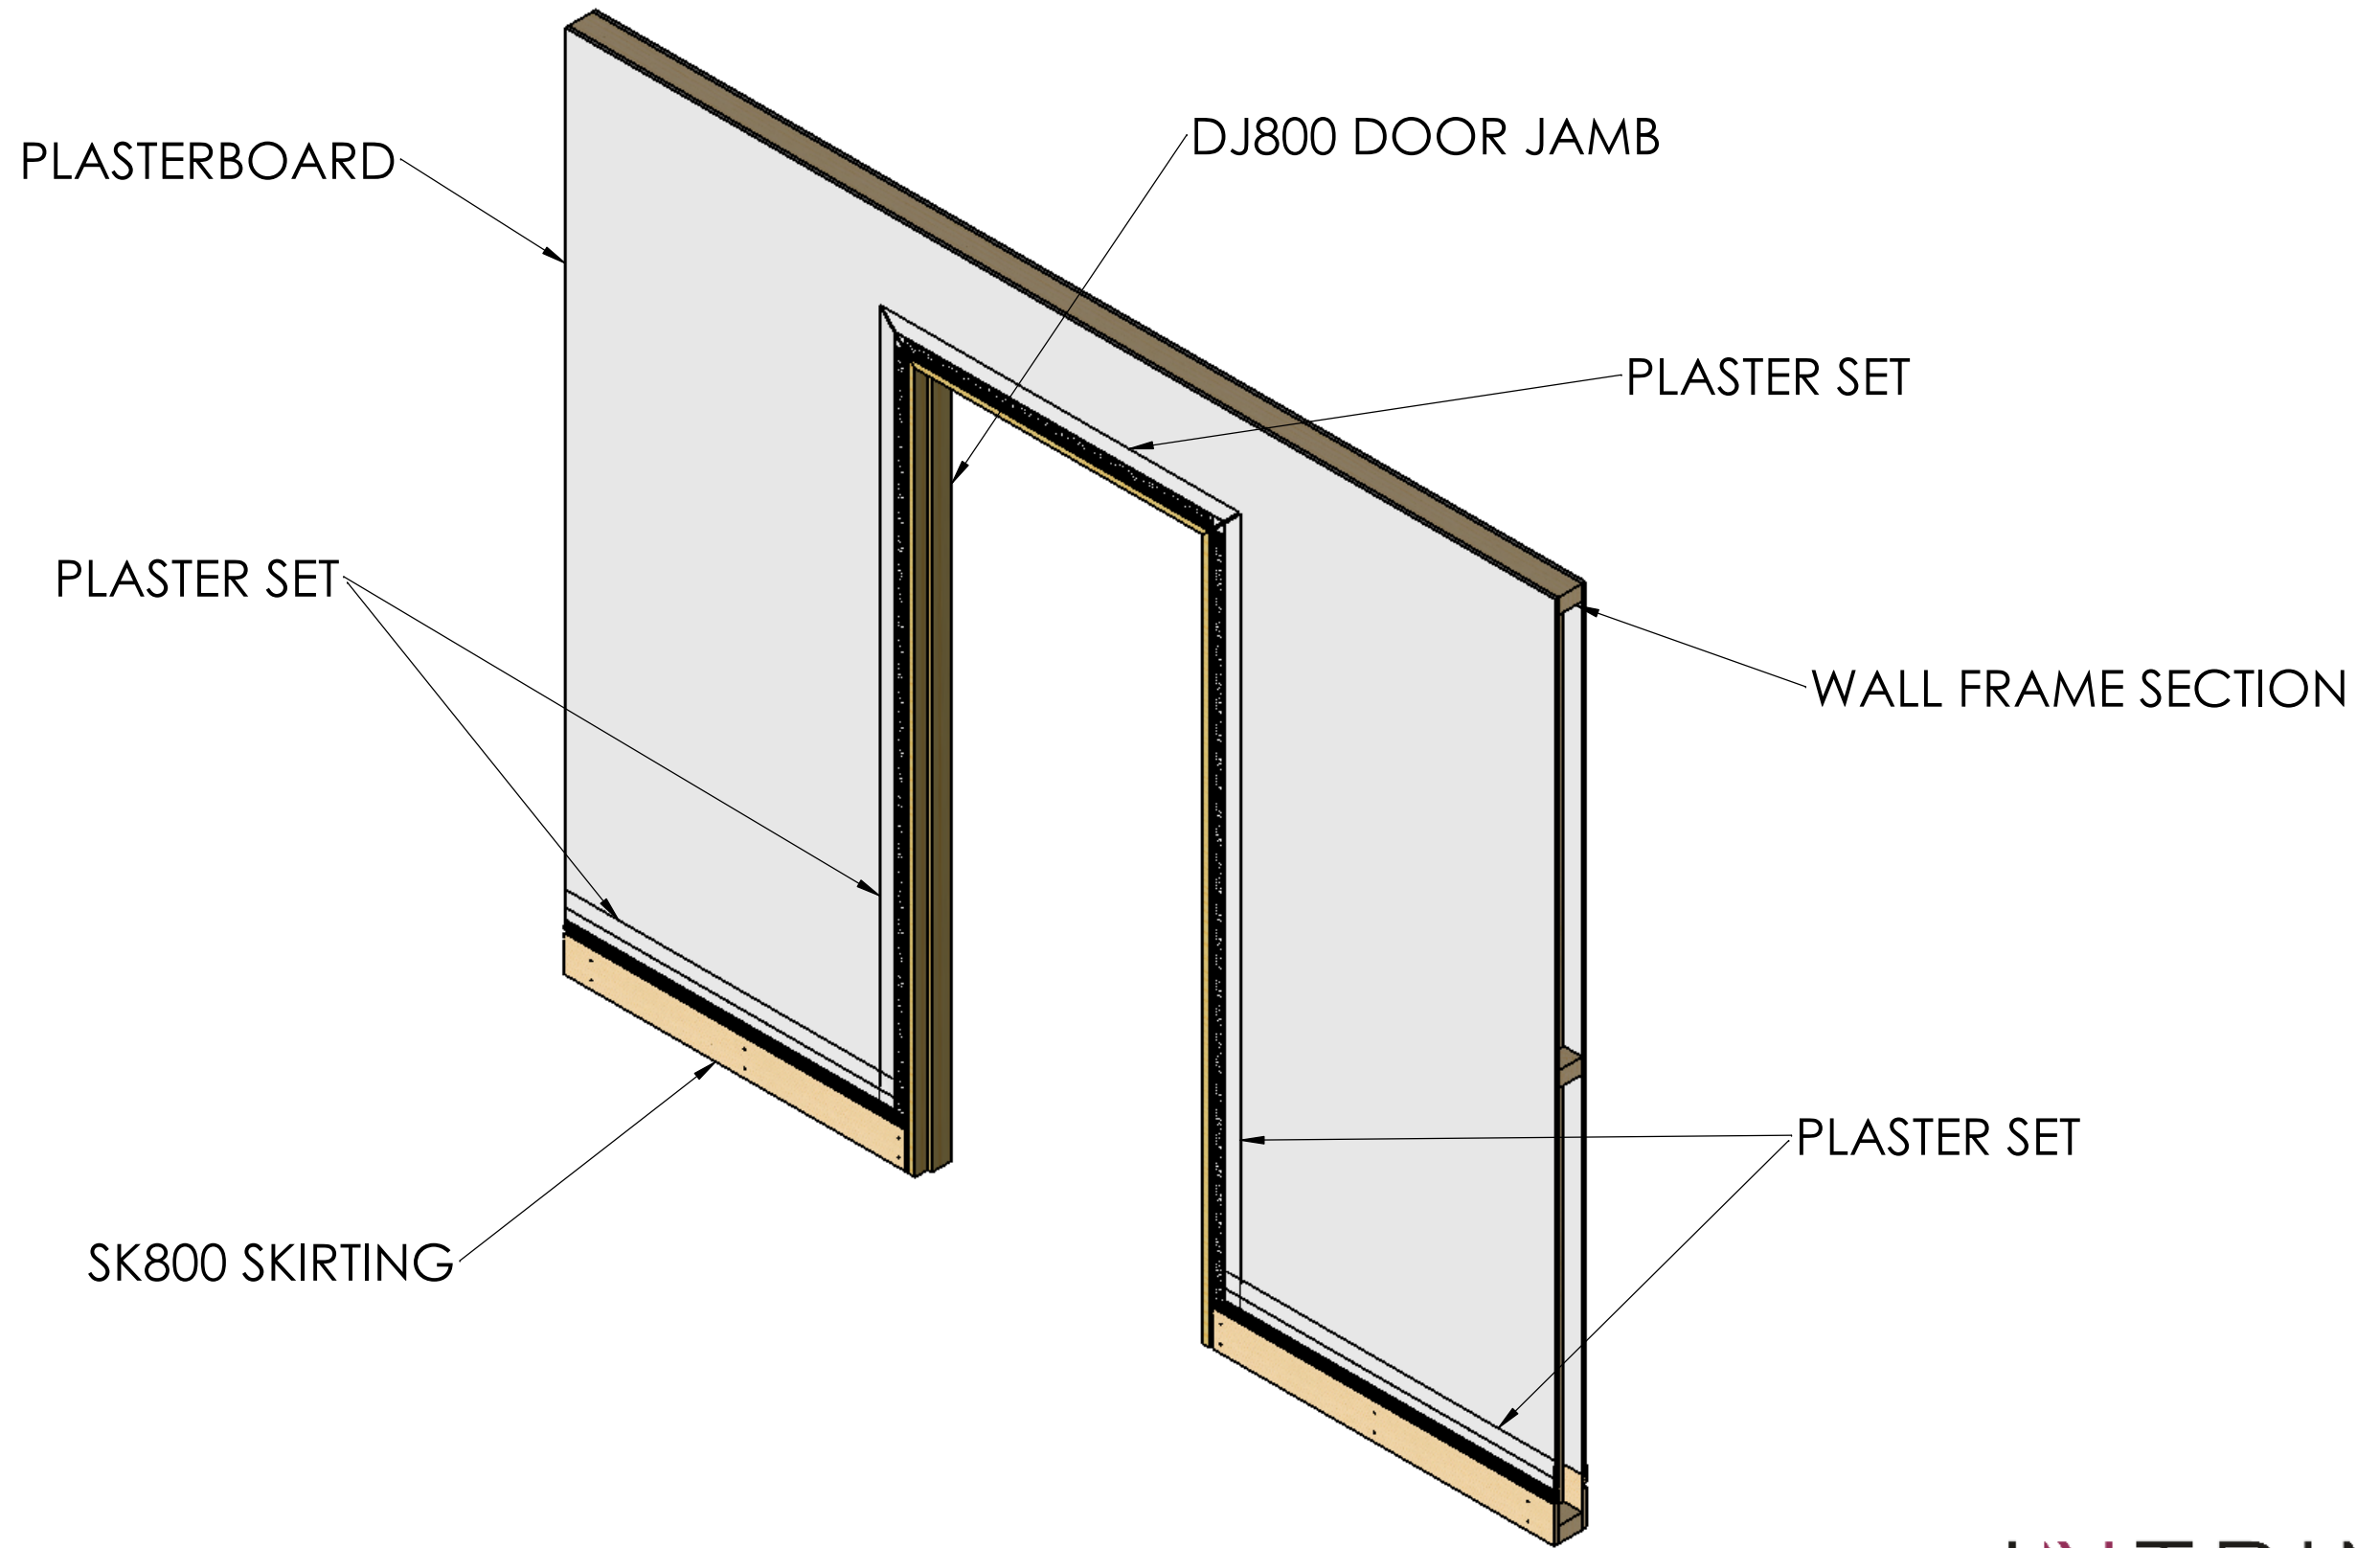


FIGURE 6 - 800 SERIES PLASTER SETTING OF DOOR JAMB AND STOP BEAD INTERSECTION

**INSTRUCTION MANUAL
FOR SK800 AND DJ800**

This drawing must be read in conjunction with SK800 video on www.intrimmouldings.com.au and plasterboard manufacturer's instructions

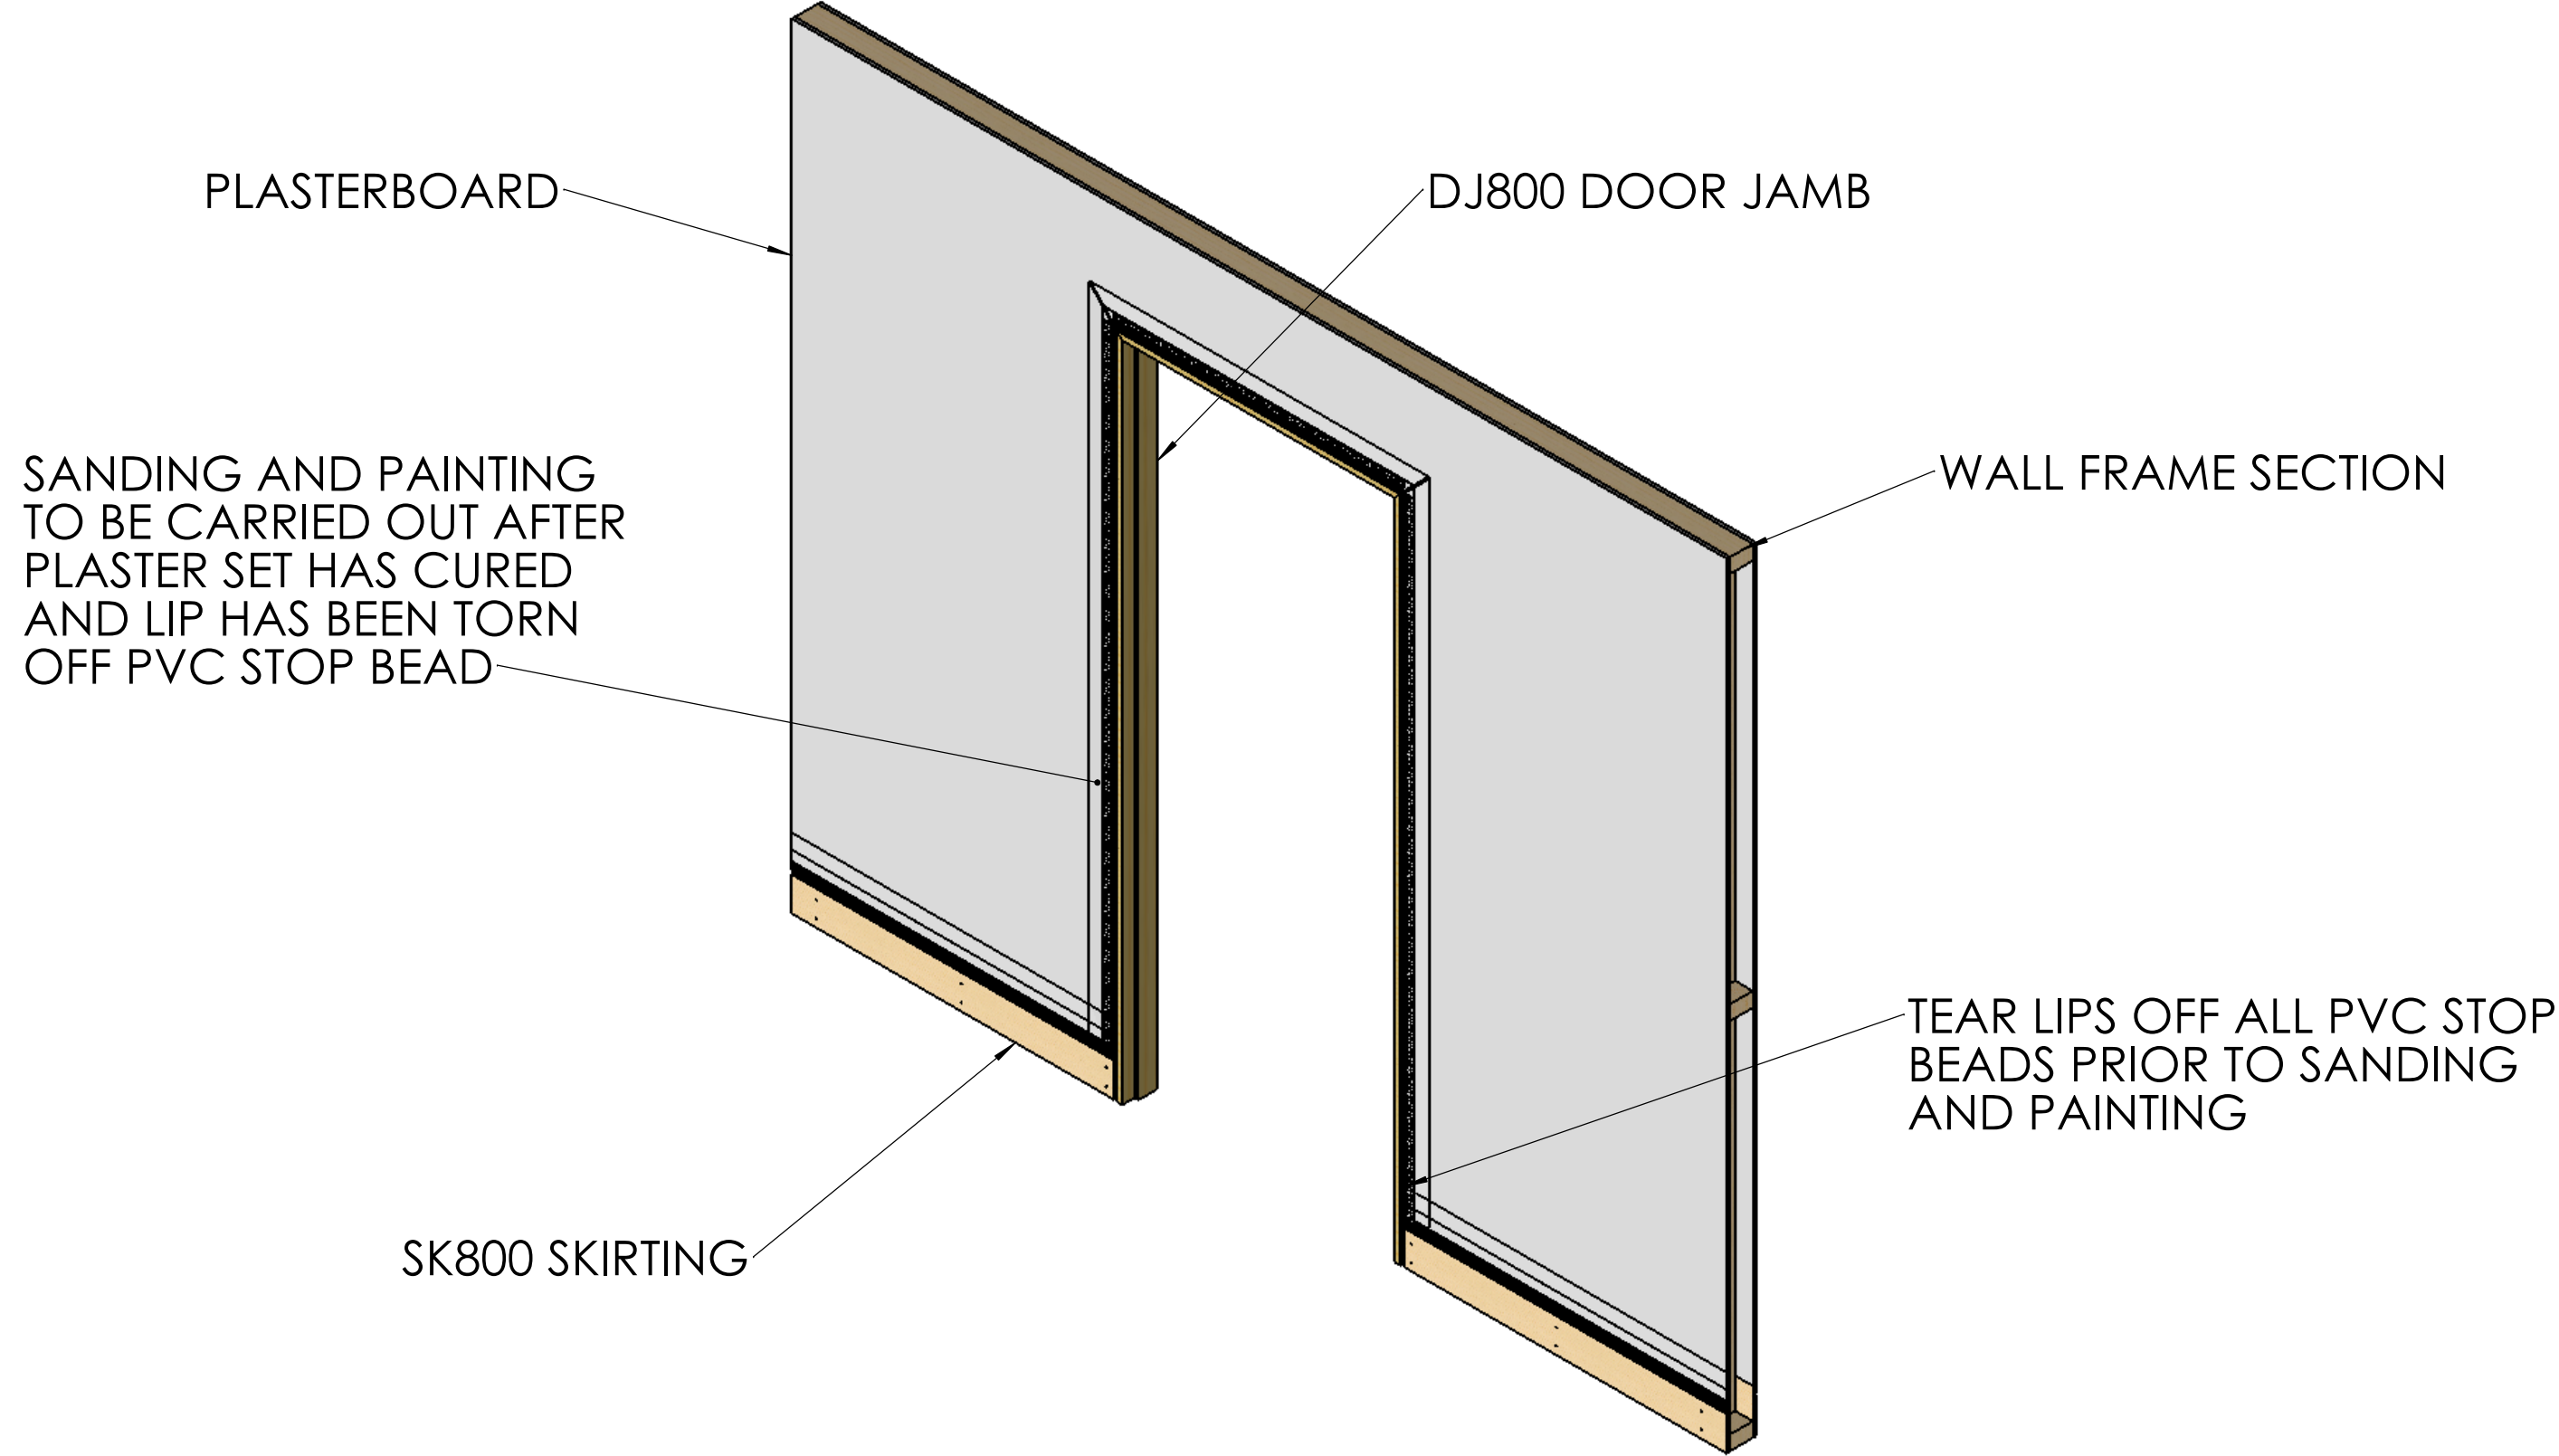


FIGURE 7 - 800 SERIES FINISHING DETAIL